


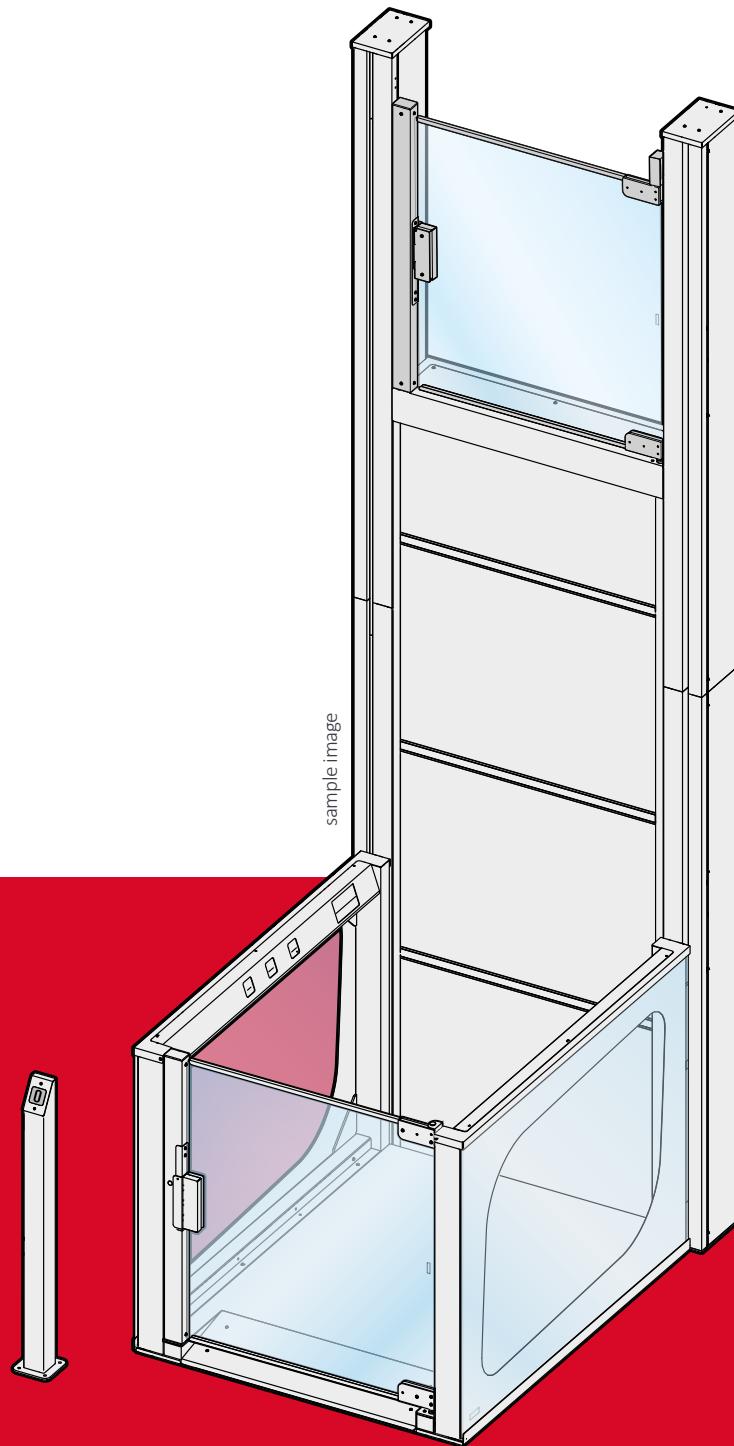

Easy Plat®

Electric belt driven low rise platform lift



**MAINTENANCE INSTRUCTIONS
SILL REPLACEMENT**

Table of contents

1. Manual reading guide	5
1.01. Preliminary information.....	5
1.02. Personal safety and risk recognition.....	5
1.03. Hazard symbols	5
1.04. Prohibition symbols	5
1.05. Mandatory symbols	5
1.06. Liability and warranty conditions	5
2. General requirements and installation site management.	7
2.1. General requirements	7
3. Box content - screws kit	8
4. Tools and materials required for assembly.....	9
5. Replacement of lining and sill guard.	10
5.01. Floor gate removal	14
5.02. Sill replacement	15



1. Manual reading guide

READ THIS MANUAL CAREFULLY BEFORE INSTALLING AND USING THE PRODUCT

Keep the technical documentation near the lift system for the entire life of the product. In the event of a change of ownership, the manual must be provided to the new user as an integral part of the product.

1.01. Preliminary information

AVVISO



This product must be installed and put into operation according to the provisions and regulations in force. Improper installation or improper use of the product can cause damage to people and property, as well as cause the warranty to lapse.

FOLLOW THE SUGGESTIONS AND RECOMMENDATIONS TO OPERATE IN SAFETY. Any unauthorised modification can compromise the safety of the system, as well as the correct operation and the life of the machine. If you have any doubts regarding the correct understanding of the information and contents contained in this manual, contact LIFTING ITALIA S.r.l. immediately.

QUALIFIED PERSONNEL: The product covered by this documentation can only be installed by qualified personnel, in compliance with the attached technical documentation, above all in compliance with the safety warnings and the precautions contained therein.

1.02. Personal safety and risk recognition

This manual contains safety rules that must be observed to safeguard personal safety and to prevent damage to the property.

The indications to be followed to guarantee personal safety are highlighted by a triangle symbol while those to avoid material damage are not preceded by the triangle. The hazard warnings are shown as follows and indicate the different levels of risk in descending order.

RISK CLASSIFICATION AND RELATIVE GRAVITY OF DAMAGE	
 DANGER	The symbol indicates that the failure to comply with appropriate safety measures causes death or serious physical injury.
 WARNING	The symbol indicates that the failure to observe the corresponding safety measures can cause death or serious personal injury.
 CAUTION	The symbol indicates that failure to observe the relevant safety measures can cause minor or moderate personal injury or damage to the device.
NOTICE	It is not a symbol of security. It indicates that the failure to comply with relevant safety measures can result in property damage.
INFORMATION	It is not a symbol of security. It indicates important information.

RISK LEVELS

If there are multiple levels of risk, the danger warning always indicates the highest one. If a warning is drawn with a triangle to warn of the risk of injury to persons, the risk of possible property damage may also be caused at the same time.rischio di possibili danni materiali.

CAUTION

During installation / maintenance of the platform, the safety functions are temporarily suspended. Therefore, all necessary precautions must be taken to avoid personal injury and / or damage to the product.



1.03. Hazard symbols

 GENERAL DANGER	 ELECTRICITY DANGER	 DANGER FLAMMABLE MATERIAL
 DANGER OF FALL BY A LEVEL	 DANGER SUSPENDED LOADS	 DANGER OF CRUSHING

1.04. Prohibition symbols

 GENERIC PROHIBITION	 FORBIDDEN TO STEP ON	 PROHIBITED TO WALK ON OR STOP IN THIS AREA
---	--	--

1.05. Mandatory symbols

 OBLIGATORY TO WEAR THE PROTECTION HELMET	 OBLIGATORY TO WEAR SAFETY SHOES	 OBLIGATORY WEAR THE PROTECTIVE GLOVES
 OBLIGATORY TO WEAR EYE PROTECTION	 OBLIGATION TO WEAR THE AUDIO PROTECTION	 OBLIGATORY TO WEAR THE MASK
 OBLIGATORY TO WEAR PROTECTIVE CLOTHES	 OBLIGATORY TO KEEP CLOSED	 OBLIGATORY TO CHECK THE PROTECTIONS

EMERGENCY AND FIRST AID SIGNS	INFORMATION SYMBOLS	INDICATION SYMBOLS
 FIRST AID	 INFORMATION	 NOTE WELL  KEEP DRY

1.06. Liability and warranty conditions

RESPONSIBILITY OF THE INSTALLER
Installers are responsible for ensuring compliance with safety procedures at work and any health and safety regulations in force in the country and on the site where the assembly is carried out.
The elevator / platform is produced and intended to be installed as described in the attached project drawing and in this manual; any divergence from the prescribed procedure may affect the operation and safety of the system and cause the immediate cancellation of the warranty.
Any modification or variation made to the project and the assembly Instructions must be documented in detail and referred to LIFTING ITALIA S.r.l., in order to allow the company an adequate assessment. Under no circumstances can a modified system be activated without the express authorization of LIFTING ITALIA S.r.l.
The elevator / platform must only be used in the way envisaged by the system and illustrated in the relative manuals (transportation of people and / or things, maximum loads, cycles of use, etc.). LIFTING ITALIA S.r.l. assumes no responsibility for damage to persons and property caused by improper use of the system.

NOTE: Pictures and images on this manual are for illustration purposes only.



2. General requirements and installation site management.

2.01. General requirements

IMPORTANT!

 For more information on safety, liability and warranty conditions, receipt and storage of material on site, packaging, waste disposal, cleaning and storage of the product; refer to the "**SAFETY INSTRUCTIONS AND SITE MANAGEMENT**" manual.

NOTICE

PRELIMINARY CHECKS: Once the packaging has been opened, check that the product is intact and has not been damaged during transport. Should any anomalies or damage be found, please dispatch them in writing on the transport document to the transport company, giving written notice to LIFTINGITALIA S.r.l.


NOTE: In this manual, we will talk about "SHAFT" meaning for it the base slab, the slab of landing and the vertical wall that connects its slabs.

CAUTION

SAFETY AND SITE MANAGEMENT - OVERALL DISPOSITIONS:


1. Always secure tools and any objects against falling;
2. Pay the utmost attention to all the steps described in this;
3. While assembling the parts making up the system or after installation, be careful of any sharp burrs (machining residues);

- Before proceeding with the installation, it is necessary to remove any rubble and material deposited during the construction of the shaft.
- Only nuts and bolts included in the supply must be used.
- The bags containing the screws must be opened in correspondence with the respective operating phases indicated in this manual.
- The instructions described in this manual refer to a reinforced shaft, to a fastening with mechanical expansion plugs of the stud type. For the use of plugs in masonry other than the reinforced concrete see the attachment to this manual. For the shafts with metal framework, we proceed by replacing the plugs with normal screws.
- In these instructions and on the wiring diagram, the stops are indicated with 0, 1, (2, 3 etc.), meaning "0" the lowest stop: the numbers on the push-button panels may be different according to the user's needs (for example- 1, 0, etc.).

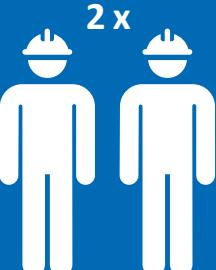

The assembly must be performed by a **MINIMUM 2** people;

If the load is greater than 50kg, use the hoist for handling.

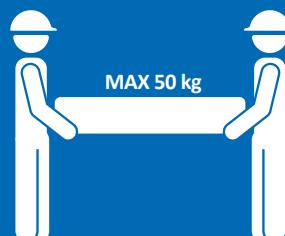




3. Box content - screws kit

INFORMATION






Each "KIT" box with its identification code represents the packaging unit, i.e. how many pieces per type are contained in each package.

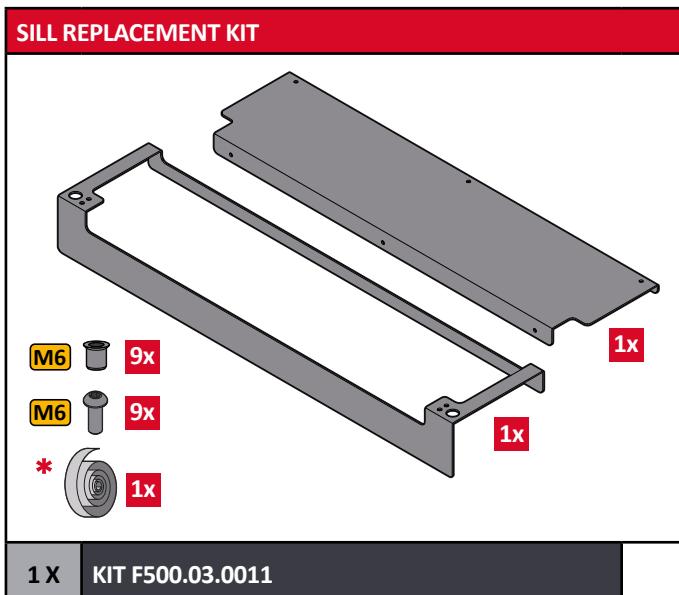

* Watertight seal in closed cell foam rubber with adhesive.



4. Tools and materials required for assembly.

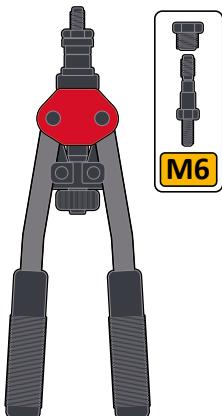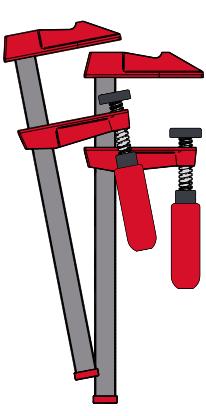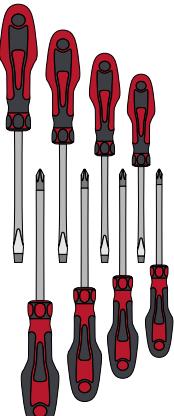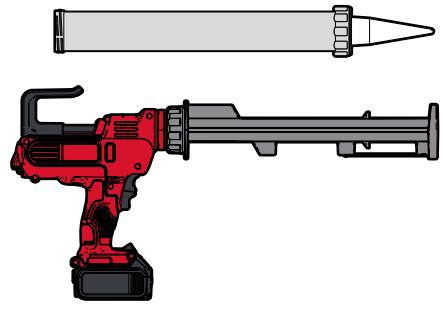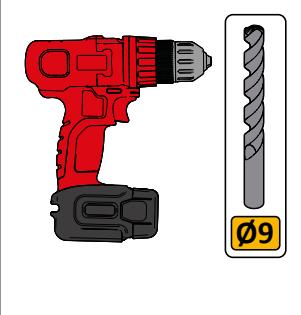
RIVETING MACHINE FOR THREADED INSERTS + M6 INSERT	SCREW CLAMP	BALL POINT LONG HEX KEY WRENCH SET	ELECTRICIAN SCREWDRIVER SET
			
1 X	2 X	1 X	1 X
CAULKING GUN + SILICONE SEALANT CAULK	DRILL + BIT FOR STEEL Ø 9 mm		
			
1 X	1 X		




5. Replacement of lining and sill guard.

5.01. Floor gate removal.


5.01.03. Upper hinge removal.

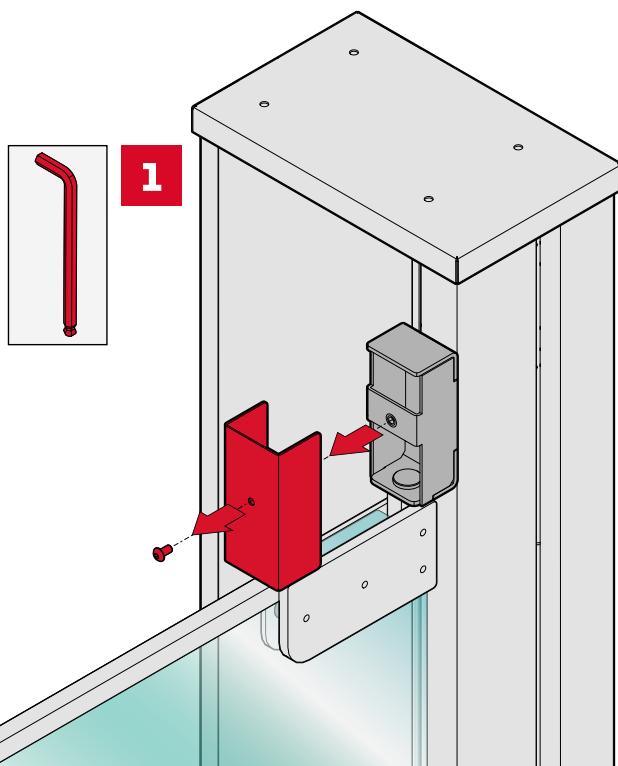

Remove the top hinge cover.

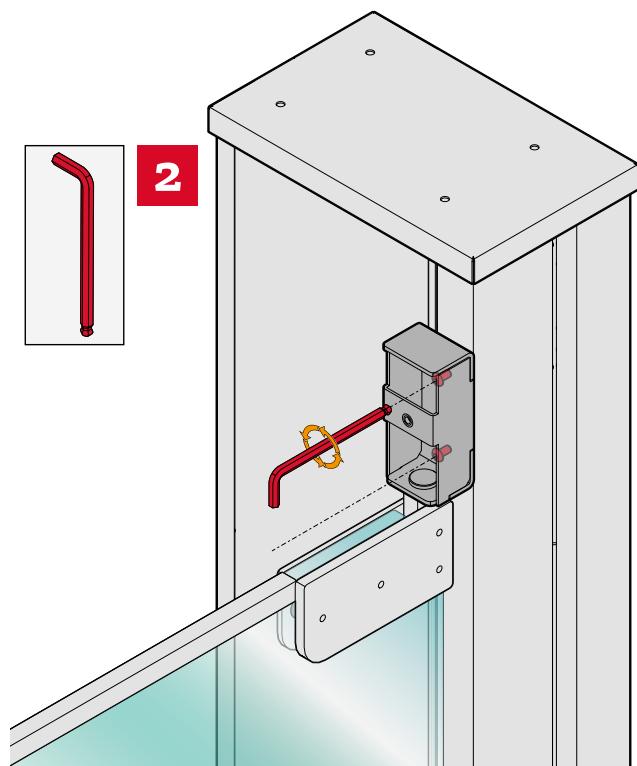


Remove the fixing screws.

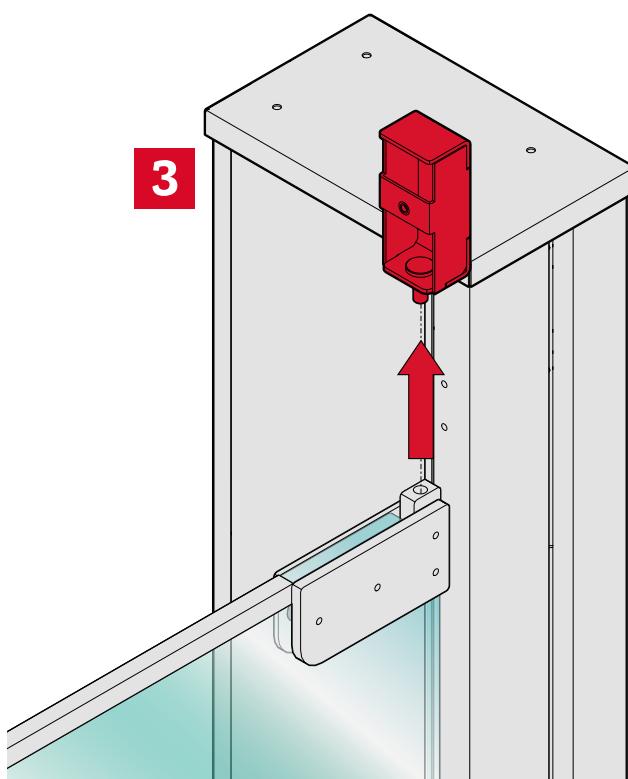


Extract the hinge from its seat.




5.01.04. Lower hinge spring removal.

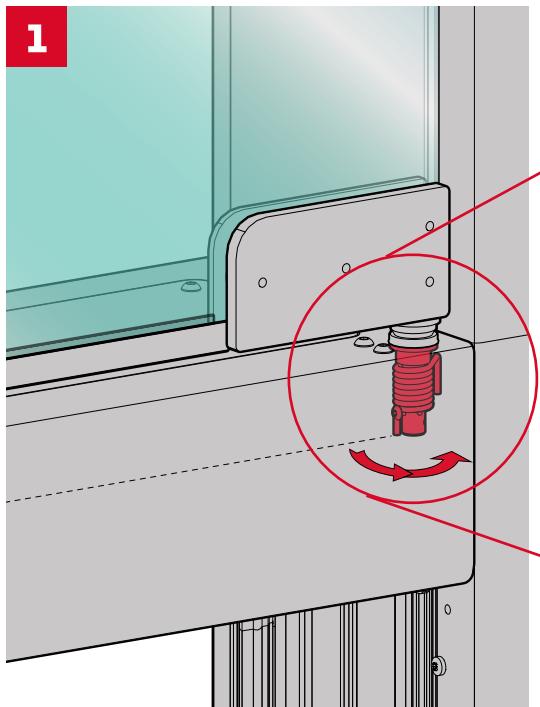

Turn the gate so that the spring locking screw is in the extraction position.

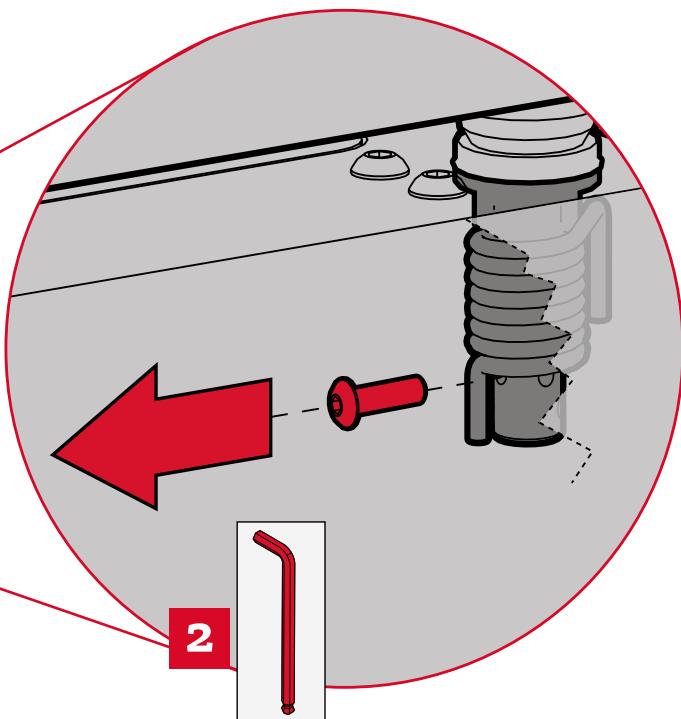

Remove the spring lock screw.

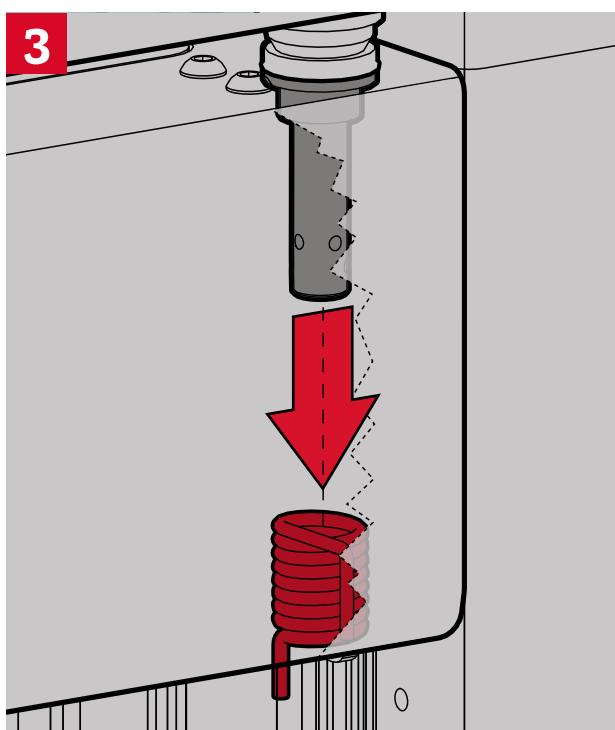


Extract the gate closing spring.




5.02. Sill replacement.

5.02.05. Sill replacement.

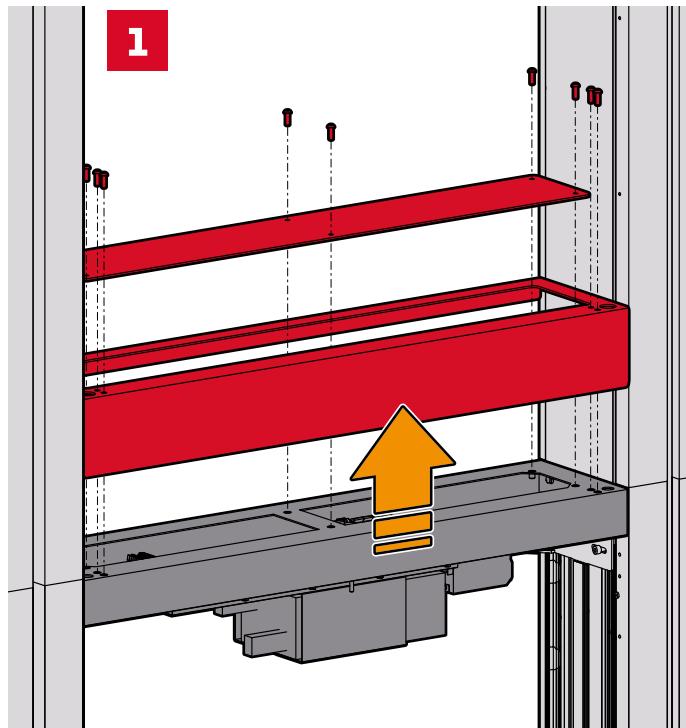


Remove the fixing screws of the sill plate.

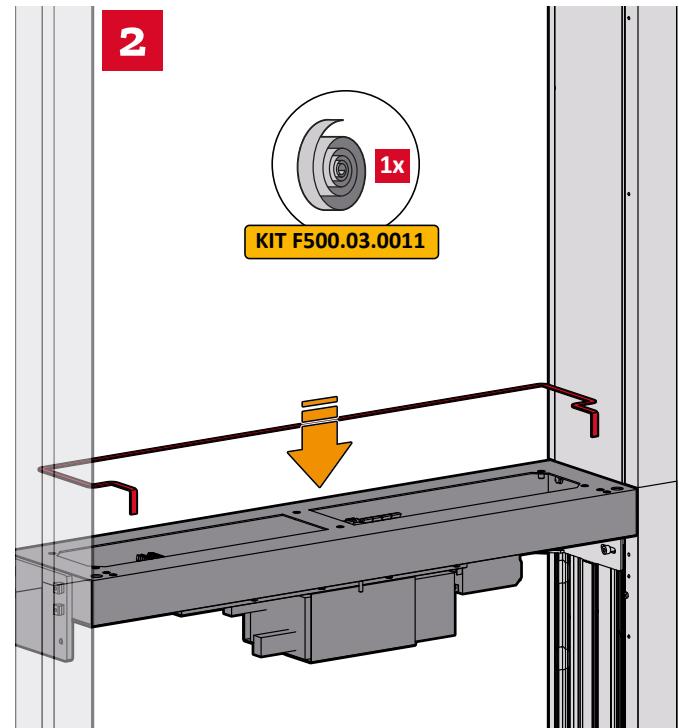


Carefully place the watertight seal.

5.02.06. Positioning and fixing of the covering and sill cover.

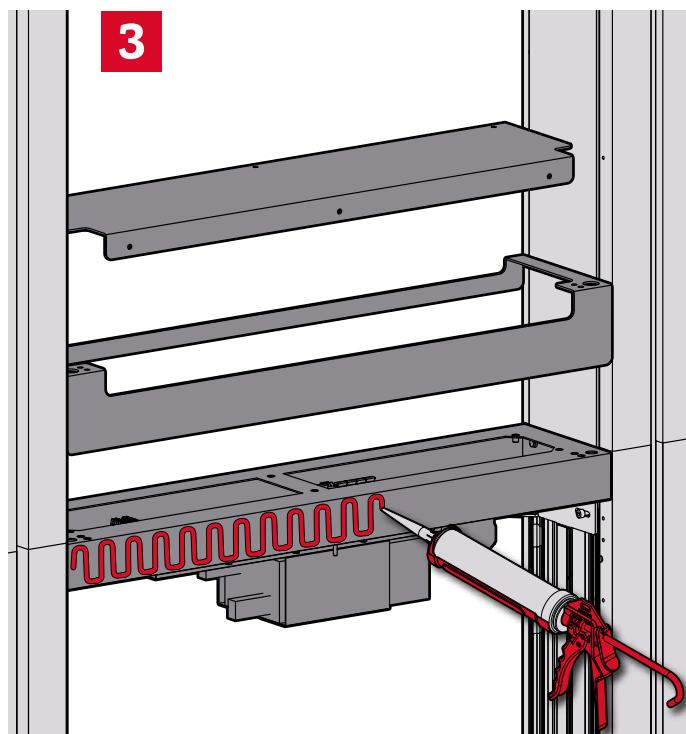


Apply the silicone carefully.

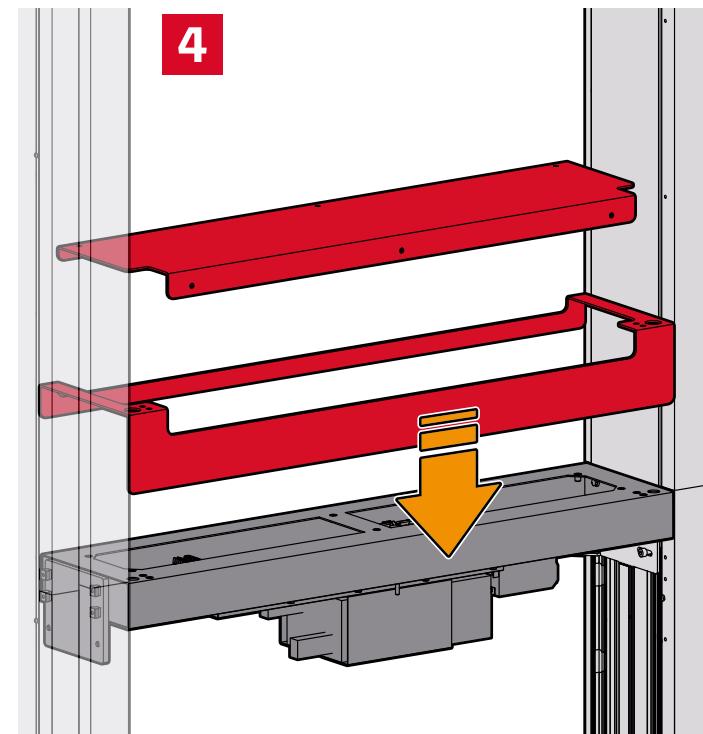


Place the new sill plates




5.02.07. Sill base drilling and application of threaded inserts.

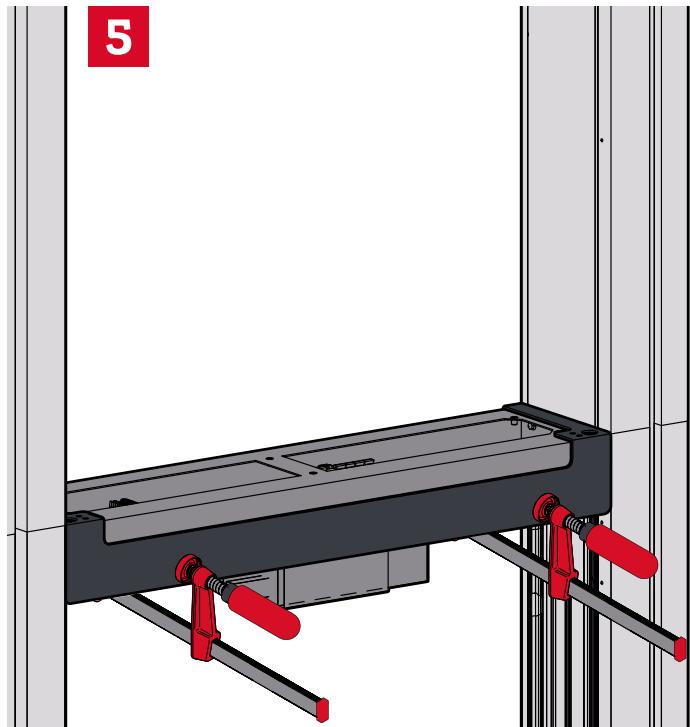


Put in a vice to facilitate gluing.

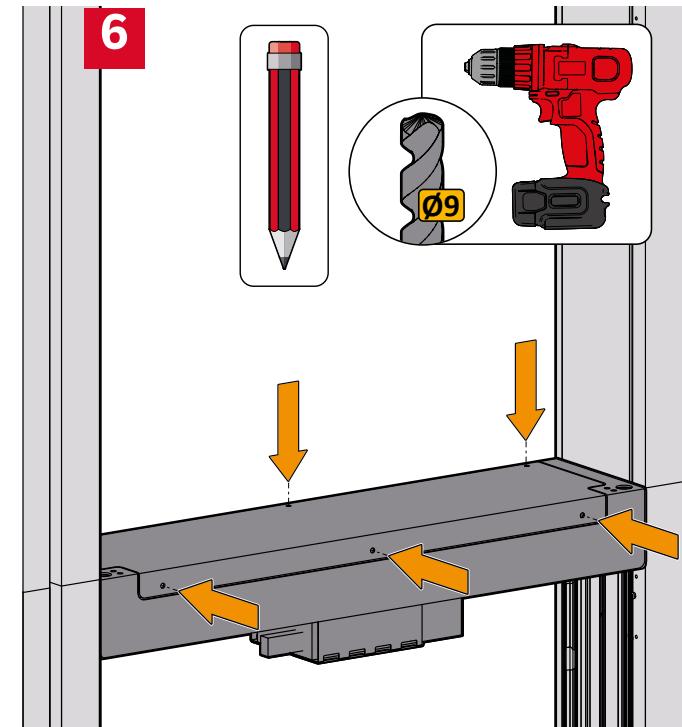

Mark and follow the holes with precision.

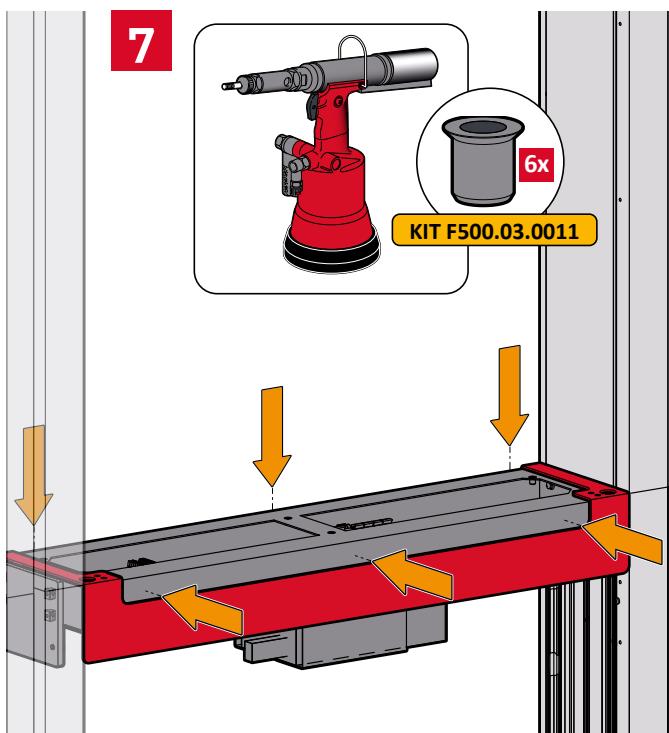

Insert the blind riveloxes supplied in the kit into the drilled holes.

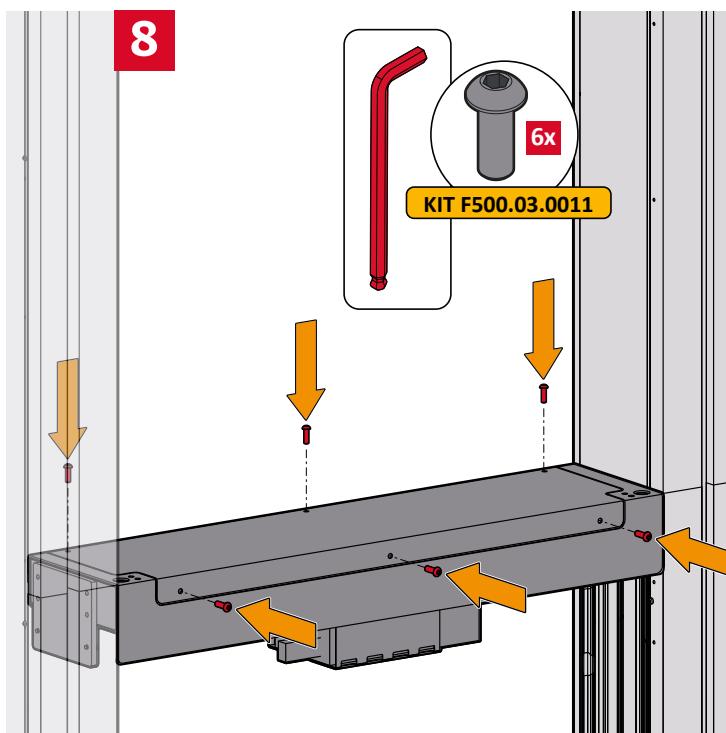

Fix with the screws supplied in the KIT.



LIFTING ITALIA S.r.l.

Via Caduti del Lavoro, 16
43058 Bogolese di Sorbolo - Parma, Italy
Tel. +39 0521 695311

www.liftingitalia.com
info@liftingitalia.com