



**8.4. PROTECTION CANOPY - ASSEMBLY (if supplied)****PRE-ASSEMBLY**

1. Assemble the profiles **(A)** around the infill panel **(B)** as indicated in the drawing.
2. Apply the profile caps. **(C)**.

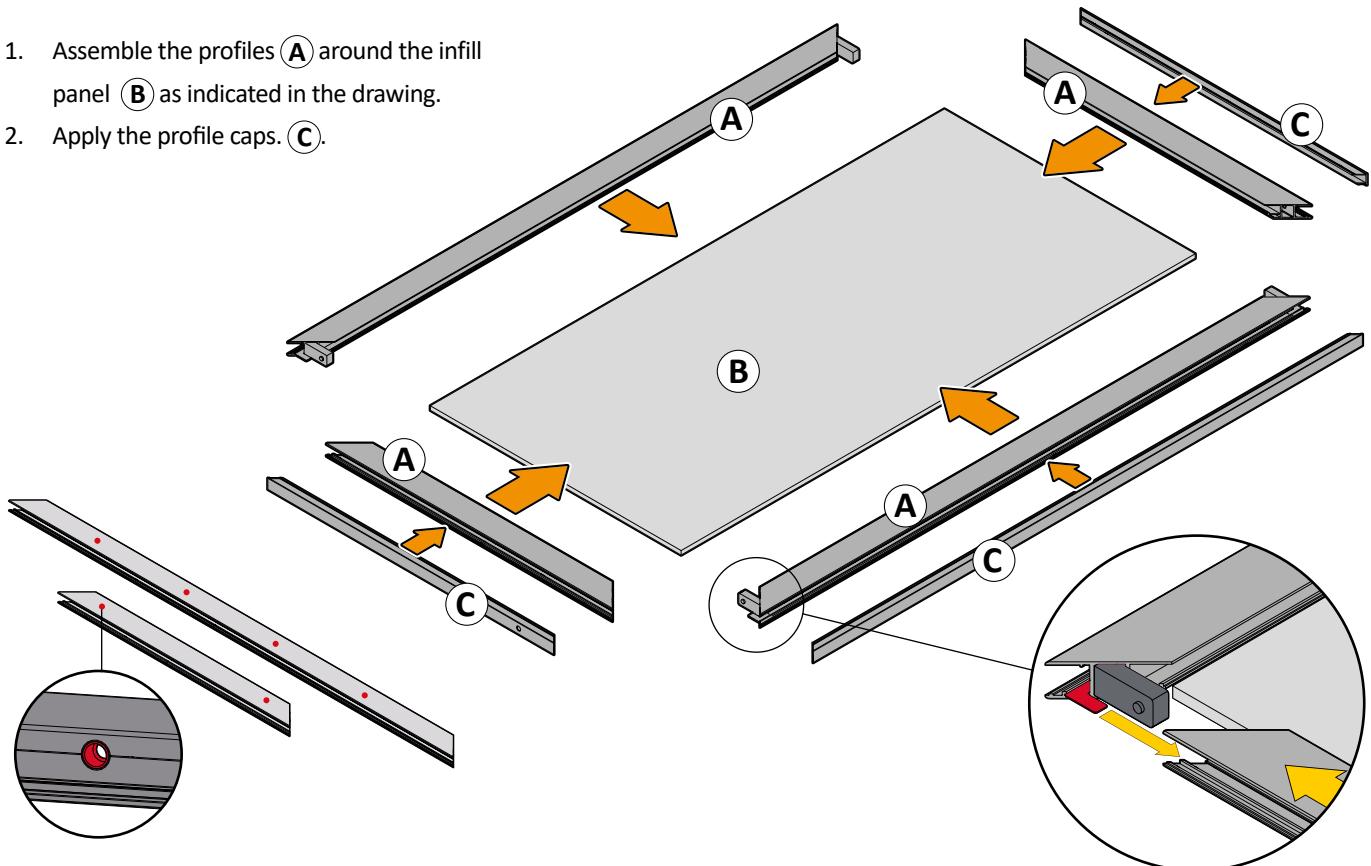


3. Fix the support brackets **(D)** with the supplied screws.
4. Secure the gutter **(E)** with the supplied screws .

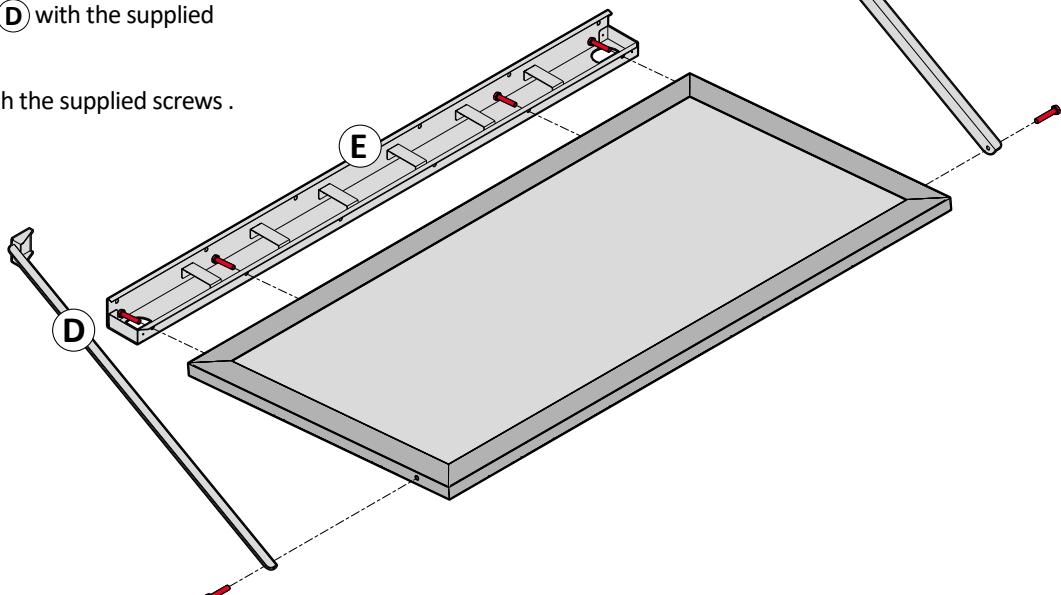





ASSEMBLY

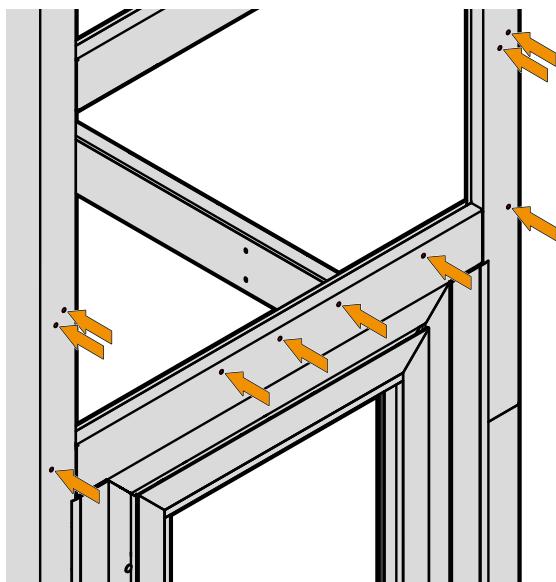

7. Accurately apply silicone **G** in the area in contact with the structure.

5. Mark the hole positions **F** accurately.
6. Drill and thread where it is marked.

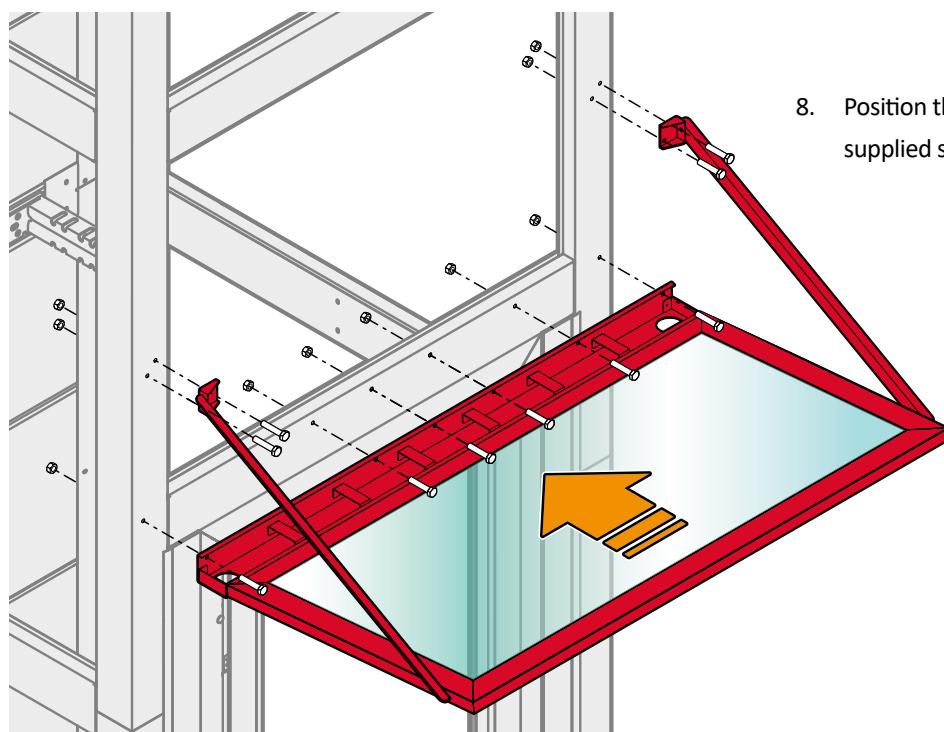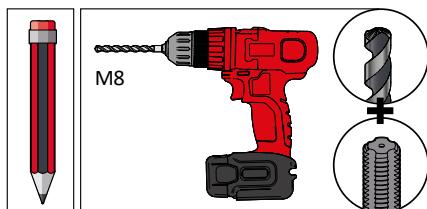

8. Position the canopy **H** and secure it with the supplied screws.